

Your Conrad Grebel Furniture

- Wood is a natural element of our planet earth. It is a living, breathing product that will expand and contract within its environment. Different times of the year you will see the seams in your table that will gap. This is perfectly normal and is not a manufacturing defect.
- Conrad Grebel Guard is a wonderful finish! It is a catalyzed varnish that is meant to protect the wood from damage. It will resist most household spills – it is not meant to be abused however. No finish is “use-proof.”
 - Use a damp cloth with water or nonabrasive wood cleaner (Simply Green All Purpose) to clean your table after use. Simply dry with a towel after.
 - You may use lemon oil once or twice a year. Do not use waxed based products or sprays such as Pledge or similar products.
 - Protect your table from hot items. Use appropriate trivets that do not collect heat such as bamboo, cloth, etc. You will cause heat rings if left too long on surface and eventually discolor the wood under the finish.
 - Wipe up spills or sweat rings from dishware as soon as possible.
- As your furniture ages it takes on its natural patina. Your furniture may turn darker over time. This is natural due to its exposure to light and time. This is a natural occurrence with solid wood especially more notable with Cherry wood.
- If you place your furniture near heating vents, fireplaces, wood stoves or the like it may damage your furniture. This is due to the extreme changes in temperature and humidity. We recommend keeping your home 35-50% humidity level year-round.